

Mixer

Model : MZ-SHT

INSTRUCTION MANUAL

<Description>

● Application

Semiconductor, medicals, and chemical industry related devices

● Features

- This is the valve that allows fluids to flow only in forward direction but not in backward direction. This product, which has the part in contact with fluids is made of excellent anti-corrosive fluorine resin, can be used with corrosive fluids such as various chemical fluids, as well as strong alkaline or acid fluids.

<Before You Use>

This product, which is included in the chemical weapon related goods specified in the regulations for foreign exchange and trade, needs the export permission according to that law in exporting. However, some sizes of this product do not apply the above mentioned.

⚠ WARNING

- Confirm the compatibility of the type of fluid to be used and the material of the part in contact with fluids before using this product.
- Before using this product, carefully read this manual to learn the correct usage of this product.
- Keep this manual at hand to see it any time you need.
- Follow the correct usage of this product specified in this manual.
- Comply with the warnings or cautions described in this manual.

<About Instruction Manual>

- The information described in this manual is subject to change without prior notice, due to improvements of product in performance and/or functionality.
- No parts of this manual may be reproduced or utilized in any form or by any means.
- Please call Surpass Industry any time you lose this manual.
- Every effort was made to ensure that all information included in this manual were complete and accurate at the time of printing. If you have any point of doubt, errors, and omissions, please contact Surpass Industry.

● Important Safety Instructions

● <About Marks Used>

The following symbols are used in this manual.

⚠ WARNING	Indicates a potentially hazardous situation that, if not avoided, could result in user death or serious injury.
-----------	---

!	Provides important notices and instructions for correct operation of the product.
---	---

1. Specifications (except for fitting)


Model	MZ-2P300P-SHT	MZ-3P300P-SHT	MZ-4P300P-SHT
Applicable fluid	Chemicals, D. I. Water		
Tube Size	1/4" ($\phi 6.35 \times \phi 3.95$)	3/8" ($\phi 9.53 \times \phi 6.35$)	1/2" ($\phi 12.7 \times \phi 9.5$)
Operating fluid pressure	0~400kPa		
Withstanding pressure	500kPa		
Fluid temperature	5~180°C		
Environment temperature	5~60°C		
Wetted parts	PTFE		

※These specifications do not make reference about fitting. Referring to fitting manufacturer about max. Pressure capabilities and max. Operating temperature range for fitting.



Because the product is damaged on the condition that a fluid temperature change occurs rapidly, please don't use it in that condition.

<External Dimensions>

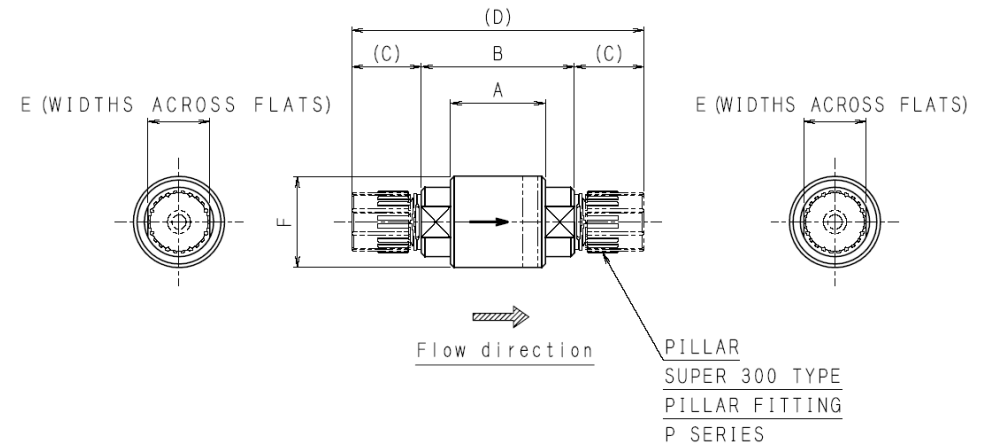


Dimensions

MODEL	A	B	C	D	E	F
MZ-2P300P-SHT	26	42	19	80	17	$\phi 25$
MZ-3P300P-SHT	31	51	25	101	25	$\phi 32$
MZ-4P300P-SHT	31	51	29	109	25	$\phi 32$

2. Tubing Procedure and Usage

① Confirm the correct flow direction.

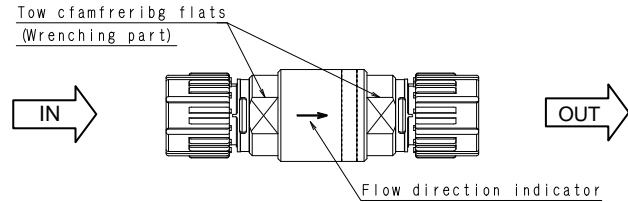

② Attach the coupling (or the tube) to the main unit. For the tightening procedure, refer to the appropriate brochure or instruction manual provided by the manufacturer of your coupling.

③ When tightening a nut, grab the two chamfering flats on the main unit with a spanner.

⚠ WARNING

- Follow the instructions provided by the manufacturer of your coupling to tighten a nut securely.
- Connect a tube (or coupling) of the correct size according to the specifications of this product. Connecting a tube (or a coupling) of a wrong size may result in leakage.
- Check the flow direction mark (→) for correct setting of IN and OUT.
- To prevent leakage from the connecting part, inspect it periodically. If any leakage detected, tighten nuts more firmly according to the appropriate brochure or instruction manual provided by the manufacturer of your coupling.
- This is a precision-made product. Never decompose or alter this product. Also, an impact from dropping may result in abnormal operation.
- Do not fix the main unit excessively with a fixing appliance. Excessive fixing may deform the product, resulting in leakage or abnormal operation.
- Be sure to hold the two-chamfering flats with a spanner when tightening a nut. Holding any other part may loosen the main unit, resulting in leakage.

3. Warranty

Surpass Industry products are warranted to be free from latently defective in performance and material for a period of one (1) year from the date of delivery. We will replace the product that is permitted in writing by us to be latently defective in design or workmanship within this time. This warranty shall not be applied to any defects caused by misuse, alteration, neglectful treatment, and neglect of our recommendations or instructions.

In addition, we are not be liable to any direct or consequential loss, damage, and personal injury due to an unauthorized usage in combination with other products and an improper usage outside of the specifications. Our product warranty shall be limited to replacement of product.

Replacement with expense to the purchaser shall be applied to the followings:

- Any defective products caused by usage that is not described in the Instruction Manual.
- Any defective products caused by neglectful treatment.
- Any defective products caused by decomposition, alteration, and improper adjustment or repair.
- Any defects of products caused by acts of God including natural disaster or fires.
- Consumables and accessories.

<Call to:>

SURPASS Surpass Industry Co., Ltd.

2203 Shimooshi, Gyoda-shi, Saitama 361-0037 Japan

Tel: 81-48-554-9760 Fax: 81-48-554-9906

URL: <http://www.surpassindustry.co.jp>

© 2012-2013 Surpass Industry Co., Ltd. All rights reserved.